

Thank you for choosing Berchet Media. We hope that through your "e-look" camera and software set, you and your family will spend some magic moments together.

We invite you to drop in on the baby surfers club at: www.berchetmedia.com.
Why not join the club and take advantage of your camera's web functions:
compile your first web album and share it only with those
you feel really deserve to!

Catch up with us soon, The Berchet Media Marketing Team

Using your "e-look" camera:

1. Getting started

- 1.1. Open the battery cover at the bottom of the camera and insert 2 LR6 - AA - AM3 1,5V DC alkaline batteries.
Follow the battery terminal markings.
- 1.2. Close the battery cover.
- 1.3. Press the ON/OFF button (button 2/illustration 1).
The digital camera makes a sound when turned on (double beep).
The LCD screen displays HR (High Resolution Mode) then 20 (the number of frames available).
Your camera is ready to take photos.


2. Automatic stand-by mode

Your "e-look" digital camera has an automatic stand-by function. It is activated after 30 seconds if you do not use it.

In this mode, your camera will store the photos you have taken to memory.

To reactivate your "e-look" camera, press the mode changeover button (button 3/illustration 1).

The camera goes back to the previous mode in use (HR, high resolution or LR, low resolution).

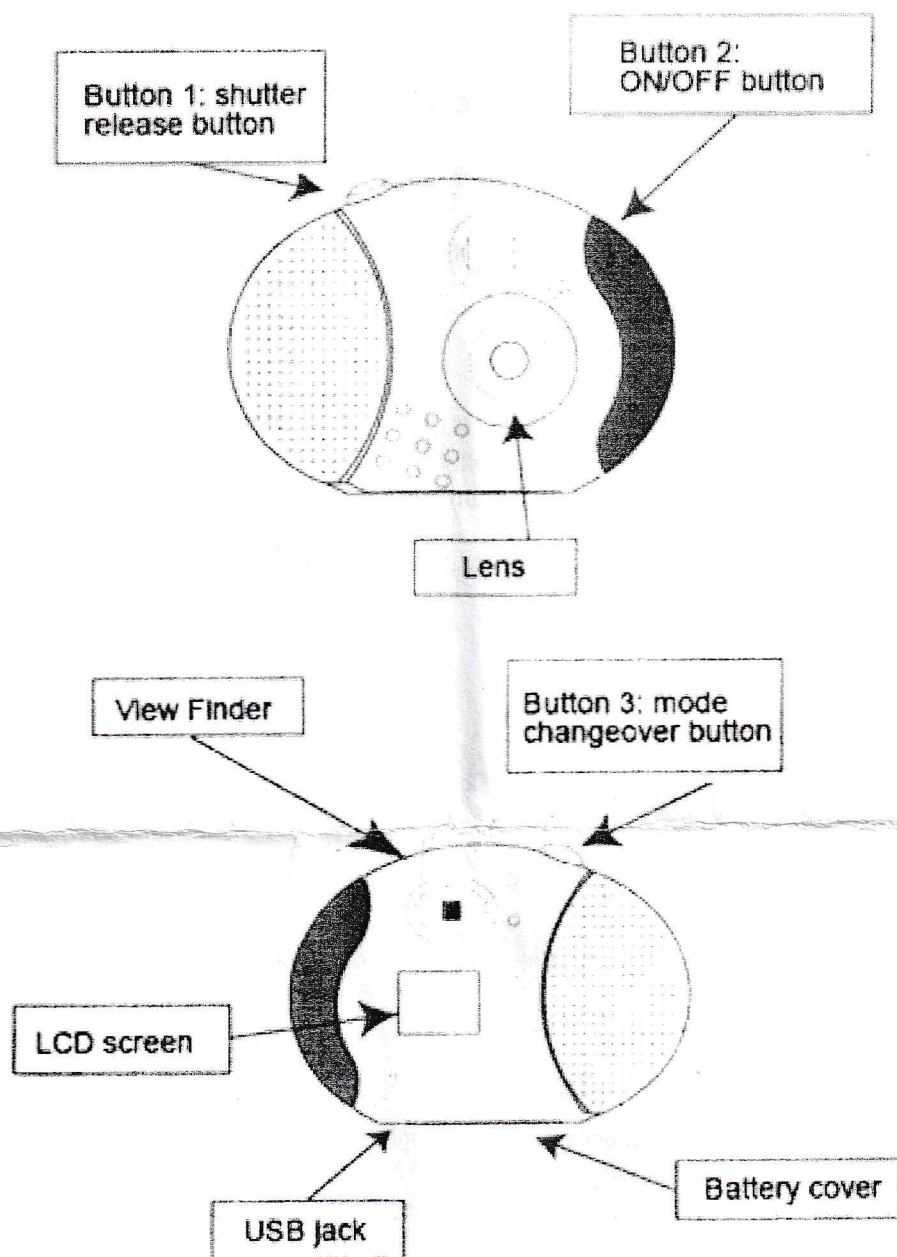

General Description:
Illustration No 1

Before you use your new "e-look" digital camera, check that all the following parts are in the box:
The digital camera, a stand that connects it to the computer via the USB port, an installation CD-ROM with guide and this user manual.


Taking Photos

Turn on your "e-look".

Choose your photography mode (refer to the "Operating modes" section in this manual).

Press the small orange button on top of the camera (button 1/illustration 1).

Each time you take a photo the camera will beep.

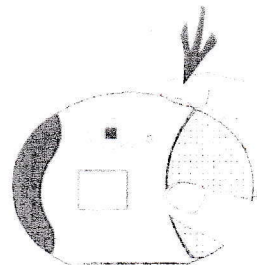

Attention

Do not turn off your "e-look" by the ON/OFF button (button 2) while you are in the middle or at the end of a shooting session otherwise you will lose those photos for ever. Let your "e-look" go into automatic stand-by mode to store them until you have dumped them to the computer.

If the outside environment is too dark, your "e-look" will make a low noise to warn you that the photo cannot be taken.

Operating modes

You have turned on your camera: you are in High Resolution mode (HR).


The screen first of all displays the capture mode HR, then the frame counter 20.

This is the first operating mode.

20: That means you are ready to take 20 large format HR photos (conventional photo format).

When the frame counter reads 00, the memory is full and you must dump the images to the computer.

To select the other modes, keep pressing the orange mode changeover button (button 3/illustration 1) until the state you require comes up, then confirm your choice by pressing the shutter release button (button 1/illustration 1).

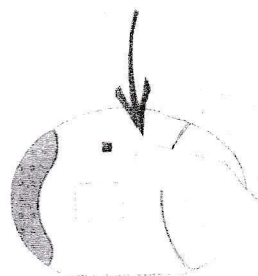

When you press the **mode changeover button once** (button 3/illustration 1), you get:
CT: this is the Mini Video Sequence Mode. This mode lets you make a mini film 4 seconds long in HR mode or 8 seconds long in LR (low resolution) mode. This video sequence is obtained by holding down the orange shutter release button (button 1) until the LCD display reads 00.

When you press the **mode changeover button twice** (button 3/illustration 1), you get:
ST: this is the Delay Mode: you confirm it by pressing the small shutter release button (button 1). The delay mechanism is set off and the photo is taken 10 seconds later. Your "e-look" then switches back to normal photography mode (HR or LR).

When you press the **mode changeover button three times** (button 3/illustration 1), you get:
CL: this mode enables you to erase photos you have taken. Once you have selected this mode, you must press once on the shutter release button (button 1) to indicate deletion (CL flashes on the screen), then press a second time on the shutter release button (button 1) to confirm. You will be informed that the photos have been erased by an audible signal (2 short beeps) and the counter will be reset to the maximum number of photos.

When you press the **mode changeover button four times** (button 3/illustration 1), you get:
LR: this is the low resolution mode (slide format photos). Once selected, you will be ready to take 80 frames in slide format.

The ideal conditions for taking quality photographs

You should take your photos ideally out of doors or with very good indoor lighting, otherwise your photos are likely to turn out rather poor.

Dumping images to computer

1. To install your camera, you must first of all connect the little stand to your computer (refer to the installation instruction inside the CD-ROM sleeve).
2. Once you have installed the stand, (make sure the computer is switched on first), then just place the camera on top of it. The program automatically boots. You are ready to dump the images and play with them.

Problems to avoid

1. If you start taking large format photos HR 20 then switch to another mode, you will not be able to dump the photos you have taken with a mixture of the two formats. So never mix the two photo formats.
2. When the batteries are running down the screen will begin to flash. Dump your images to the computer as soon as you can and replace the batteries.

Precautions

Do not drop the camera.

Do not take your camera apart.

Do not spill any liquids onto the camera.

Do not touch the lens.

Do not use the camera in extreme conditions such as: very hot or cold temperatures, high humidity level, dusty environment, very strong vibrations.

Do not use near a television, radio, motor or transformer that has a strong magnetic field.

Instruction leaflet for battery driven toys

Battery driven toys

1. Batteries should only be changed or inserted by an adult.
2. Turn off the toy by pushing the switch to the "OFF" position before inserting the batteries.
3. Insert the batteries following the instructions given on the toy or packaging.
4. Always use one type of battery - do not mix different brands of batteries.
5. Never mix new batteries with old batteries.
6. Never use rechargeable batteries.
7. Never try to charge non-rechargeable batteries.
8. Replace all the batteries all in one go by new ones.
9. Do not leave the batteries in the toy if it is going to be left unused for long periods.
10. Always remove run down batteries from the toy.
11. Dispose of the batteries properly - never burn them or try to open up the housing.
12. Always keep small batteries out of reach of young children, as they may inadvertently cause suffocation.
13. Batteries are dangerous if swallowed. If a child has swallowed a small battery, call a doctor immediately.
14. Never short-circuit the power terminals.
15. Keep the packaging as it contains important information.
16. Do not throw run down batteries into your household waste, but dispose of them at specialized battery banks or disposal centers only.
17. Please keep this leaflet in a safe place.

Bedankt voor het kiezen voor Berchet Media. Wij hopen dat u en uw familie samen betoverende momenten beleven dankzij uw "e-look" fototoestel en software.

Wij nodigen u uit om een bezoekje te brengen aan de baby surfers club op www.berchetmedia.com. U kunt ook lid worden van de club en de webfuncties van uw camera gebruiken: stel uw eerste internetalbum samen en deel het enkel met de personen die het echt verdienen!

Raak snel op de hoogte. Het media marketingteam van Berchet.

Uw "e-look" fototoestel gebruiken

1. Aan de slag

- 1.1. Open het batterijdeksel onderaan het fototoestel en plaats 2 LR6 - AA - AM3 - 1,5V alkalinebatterijen.
Volg de aanduiding van de polen.
- 1.2. Sluit het batterijdeksel.
- 1.3. Druk op de AAN/UIT-knop (knop 2/afbeelding 1).
Het digitale fototoestel maakt een geluid als u het inschakelt (twee pieptonen).
Op het LCD-scherm verschijnt HR (Hoge Resolutie) en daarna 20 (het aantal beschikbare foto's).
Uw fototoestel is klaar om foto's te nemen.

2. Automatische stand-by

Uw "e-look" fototoestel heeft een automatische stand-by-functie, die wordt geactiveerd als u het fototoestel 30 seconden niet gebruikt.
In deze modus zal het fototoestel de foto's, die u hebt genomen, in het geheugen bewaren.
Om uw "e-look" fototoestel terug in te schakelen, drukt u op de modusknop (knop 3/afbeelding 1).
Het fototoestel schakelt terug naar de vorige gebruikte modus (HR, hoge resolutie of LR, lage resolutie).

Te vermijden problemen

1. Als u begint met het nemen van foto's van groot formaat en met een hoge resolutie en daarna op een andere modus overschakelt, kan u de foto's in beide formaten niet meer op de computer zetten. Gebruik dus nooit de twee formaten door elkaar.
2. Als de batterijen bijna leeg zijn, zal het scherm beginnen flikkeren. Zet uw foto's zo snel mogelijk op de computer en vervang te batterijen.

Voorzorgsmaatregelen

Laat het fototoestel niet vallen.

Haal het fototoestel niet uit elkaar.

Mors geen vloeistoffen op het fototoestel.

Raak de lens niet aan.


Gebruik het fototoestel niet in extreme omstandigheden, zoals: erg hoge of lage temperaturen, hoge vochtigheidsgraad, stoffige omgeving, sterke trillingen.

Gebruik het fototoestel niet in de buurt van een televisie, radio, motor of transformator met een sterk magnetisch veld.

Handleiding voor speelgoed op batterijen

SPEELGOED DAT OP BATTERIJEN WERKT

1. De batterijen mogen enkel door een volwassene worden geplaatst of verwisseld.
2. Schakel het speelgoed uit door de schakelaar op UIT te zetten voor u de batterijen plaatst.
3. Plaats de batterijen volgens de aanwijzingen op het speelgoed of op de verpakking.
4. Gebruik altijd eenzelfde soort batterijen - gebruik geen verschillende merken door elkaar.
5. Gebruik nooit oude en nieuwe batterijen door elkaar.
6. Gebruik nooit oplaadbare batterijen.
7. Probeer nooit niet-oplaadbare batterijen op te laden.
8. Vervang alle batterijen samen door nieuwe.
9. Laat de batterijen niet in het speelgoed als het speelgoed lange tijd niet zal worden gebruikt.
10. Haal lege batterijen altijd uit het speelgoed.
11. Ontdoe u op een correcte manier van de batterijen - verbrandt ze nooit of probeer nooit het omhulsel open te maken.
12. Hou kleine batterijen buiten het bereik van kleine kinderen, ze kunnen onbedoeld verstikking veroorzaken.
13. Batterijen zijn gevaarlijk als ze worden ingeslikt. Als een kind een kleine batterij heeft ingeslikt, bel dan onmiddellijk een dokter.
14. De stroombron nooit kortsluiten.
15. Hou de verpakking, deze bevat belangrijke informatie.
16. Gooi lege batterijen niet bij het huishoudafval maar gooi ze in speciale batterijdoosjes of breng ze naar speciale ophaalcentra.
17. Bewaar deze handleiding op een veilige plaats.

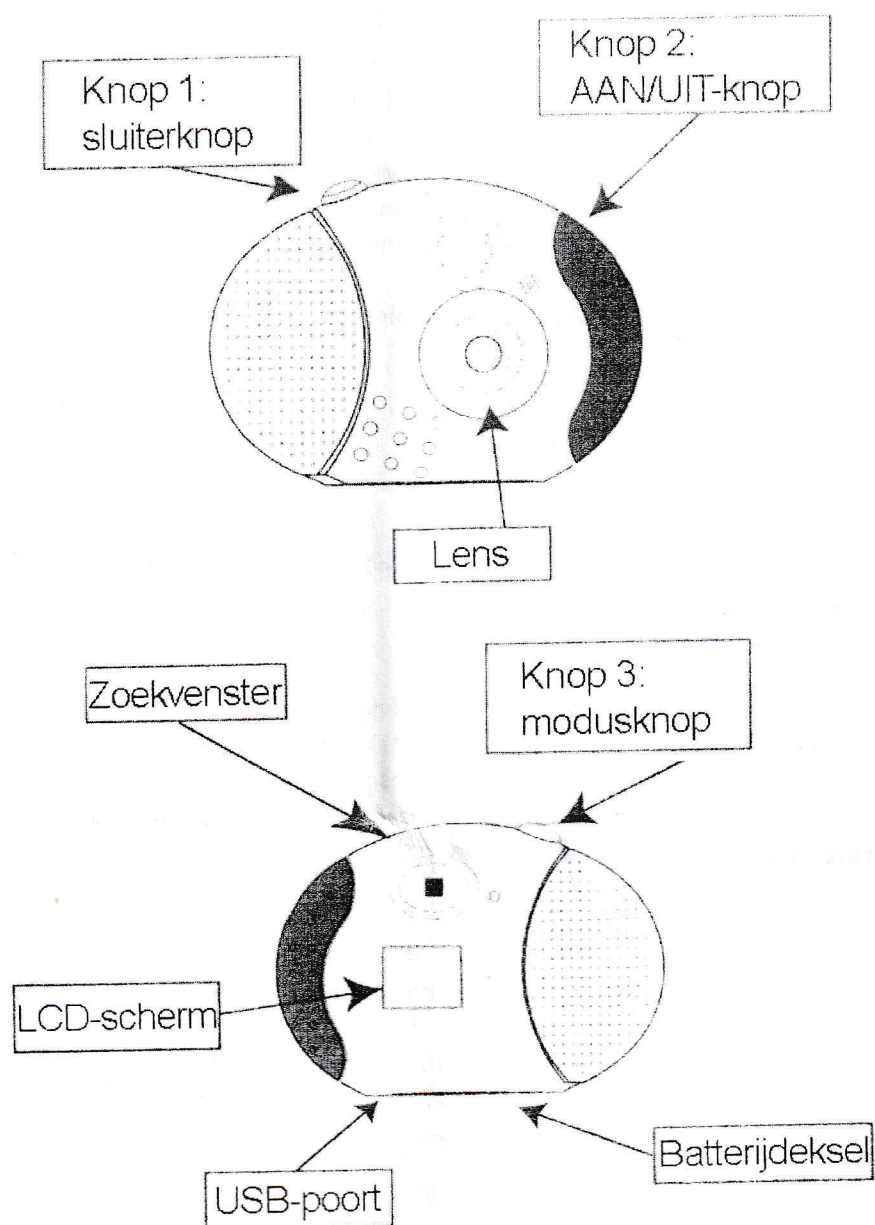

Algemene beschrijving:
Afbeelding nr. 1

Voor u uw nieuw "e-look" digitaal fototoestel gebruikt, moet u controleren of al de volgende onderdelen zich in de doos bevinden: het digitale fototoestel, een statief om het fototoestel met de USB-poort van de computer te verbinden, een installatie-cd-rom met een gids en deze gebruikershandleiding.


Foto's nemen

Schakel uw "e-look" fototoestel in.

Kies een modus (zie het hoofdstuk "werkingsmodi" van deze handleiding).

Druk op de kleine oranje knop bovenaan het fototoestel (knop 1/afbeelding 1).

Het fototoestel maakt een geluidje telkens u een foto neemt.

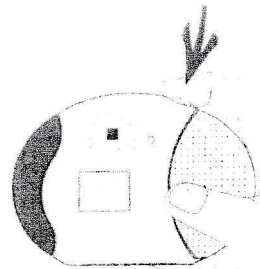

Opgelet

Schakel uw "e-look" fototoestel niet uit door op de AAN/UIT-knop te drukken tijdens of aan het einde van een fotosessie. Als u dat doet, verliest u de foto's voorgoed. Laat uw "e-look" fototoestel naar de stand-by modus overschakelen om de foto's te bewaren, tot u de foto's op de computer kan zetten.

Als de omgeving te donker is, maakt uw "e-look" fototoestel een laag geluidje, om u te waarschuwen dat er geen foto kan worden genomen.

Werkingsmodi

U hebt het fototoestel ingeschakeld: u werkt in de modus hoge resolutie (HR).


Eerst verschijnt op het scherm de modus HR, daarna verschijnt de teller 20.

Dit is de eerste werkingsmodus.

20: dit betekent dat u 20 foto's van groot formaat en met hoge resolutie kan nemen (gewoon fotoformaat).

Als de teller 00 aangeeft, is het geheugen vol en moet u de foto's op de computer zetten.

Om een andere modus te kiezen, blijft u de oranje modusknop indrukken (knop 3/afbeelding 1) tot de gewenste modus verschijnt. Daarna bevestigt u uw keuze door op de sluiterknop te drukken (knop 1/afbeelding 1).

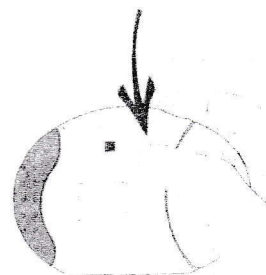

Als u **éénmaal** op de **modusknop** drukt (knop 3/afbeelding 1), krijgt u:
CT: dit is de modus minivideo. In deze modus kan u een filmpje van 4 seconden in HR-modus of van 8 seconden in LR-modus (lage resolutie) maken. U kan het filmpje maken door de oranje sluiterknop (knop 1) te blijven indrukken tot er 00 op het LCD-scherm verschijnt.

Als u **tweemaal** op de **modusknop** drukt (knop 3/afbeelding 1), krijgt u:
ST: dit is de vertragsmodus: bevestig door op de kleine sluiterknop te drukken (knop 1). Het vertragsmechanisme wordt ingesteld en de foto wordt 10 seconden later genomen. Daarna schakelt uw "e-look" fototoestel terug over naar de normale fotomodus (HR of LR).

Als u **driemaal** op de **modusknop** drukt (knop 3/afbeelding 1), krijgt u:
CL: in deze modus kan u de genomen foto's wissen. Als u deze modus hebt gekozen, moet u éénmaal op de sluiterknop (knop 1) drukken om "verwijderen" te kunnen selecteren (CL verschijnt op het scherm). Daarna moet u een tweede keer op de sluiterknop drukken om te bevestigen. Een geluidssignaal (2 korte pieptonen) waarschuwt u dat de foto's verwijderd zijn en de teller staat terug op het maximum aantal foto's.

Als u **viermaal** op de **modusknop** drukt (knop 3/afbeelding 1), krijgt u:
LR: dit is de modus lage resolutie (foto's in diaformaat). Als u deze modus heeft geselecteerd, kan u 80 foto's maken in diaformaat.

De ideale omstandigheden om kwaliteitsfoto's te maken

U neemt de foto's best buiten of binnen, met een heel goede verlichting, anders zullen uw foto's van lagere kwaliteit zijn.

Foto's op de computer zetten

1. Om uw fototoestel te installeren, moet u eerst het statiefje met de computer verbinden (zie de installatieaanwijzingen binnen in het cd-romhoesje).
2. Als u het statief hebt geïnstalleerd (zorg ervoor dat u eerst de computer inschakelt), hoeft u enkel nog het fototoestel op het statief te plaatsen. Het programma wordt automatisch gestart. U kunt nu de foto's op de computer zetten en ze bewerken.

